

INSTALLATION INSTRUCTIONS

Failure to follow these instructions can severely shorten the life of this part and may void the part's warranty.

Installation Process

- 1) Ensure 2 mounting screws or rivets are used to hold relay flat on the mounting surface. Do not over torque or distortion will occur and prevent proper heat sinking of relay to vehicle.

- 2) Clean mounting surface of vehicle to bare metal and apply thermal paste included to metal back plate of relay.

- 3) With the key removed from the ignition and the negative battery terminal disconnected, check that neither fan motor is locked. Also, check radiator fins for signs of fan blade contact that will overload and damage newly installed relay.

Models Covered: DR1088