

INSTALLATION INSTRUCTIONS

Failure to follow these instructions can severely shorten the life of this part and may void the part's warranty.

Installation Process

Rotor Replacement Instructions

WARNING: REPLACEMENT ROTOR MUST BE INSTALLED WITH THE VANE TIP POINTING IN THE SAME DIRECTION AS THE UNIT CURRENTLY ON THE VEHICLE. FAILURE TO FOLLOW THESE INSTRUCTIONS COULD CAUSE A SERIOUS MIS-FIRE WITH RESULTANT DAMAGE TO THE VEHICLES EXHAUST SYSTEM, ROTOR, CAP, OR IGNITER.

1. Remove distributor cap. Locate the position of the rotor vane tip and mark the distributor housing as a reference for the new rotor installation.
2. Remove the old rotor.
3. Install the new rotor with the vane tip pointing towards the reference mark. Exert required pressure to ensure proper seating of the rotor clip onto the distributor shaft.
4. Reinstall the distributor cap.

Models Covered:

3929B
3930B
3931B
3935B
3951B
3952B
3953B