

INSTALLATION INSTRUCTIONS

Failure to follow these instructions can severely shorten the life of this part and may void the part's warranty.

Installation Process

- A. Shut off engine
- B. Carefully remove the two connectors attached to each end of the old module. Remove the two screws that retain the module. Examine the screws for excess corrosion. Replace if needed.
- C. **IT IS ABSOLUTELY REQUIRED THAT YOU APPLY THE THERMAL GREASE PROVIDED TO THE METAL PLATE OF THE MODULE!** Failure to do so will shorten the life of the module and void the warranty. Clean the mounting surface of old grease, dirt and any corrosion found.
- D. Install the new module by installing the two screws evenly and being sure to maintain even contact with the distributor base.
- E. If the engine fails to start after careful installation of the new module, check the following:
 - 1. Inspect the Distributor Cap and Rotor for evidence of arcing or burning. Replace Cap and Rotor if found.
 - 2. Make sure that you have proper voltage at terminal B of the module.
 - 3. Check that the pick-up coil has continuity (should be between 750 and 950 ohms).

Models Covered:

7000	2-7000	3-7000
7018	2-7018	
7024	2-7024	
7025	2-7025	