


INSTALLATION INSTRUCTIONS

Failure to follow these instructions can severely shorten the life of this part and may void the part's warranty.

Installation Process

PCV Nylon E, L or F Connector Installation

1. If your PCV kit contains connectors, and the old PCV requires one on it, immerse the similar connector in hot water to soften the nylon for ease of installation onto the PCV.
2. If your valve has an "F" connector installed and the old one is an "L" connector, Use the twist-off plug* or the enclosed cap** to plug the upper outlet of the "F" connector.

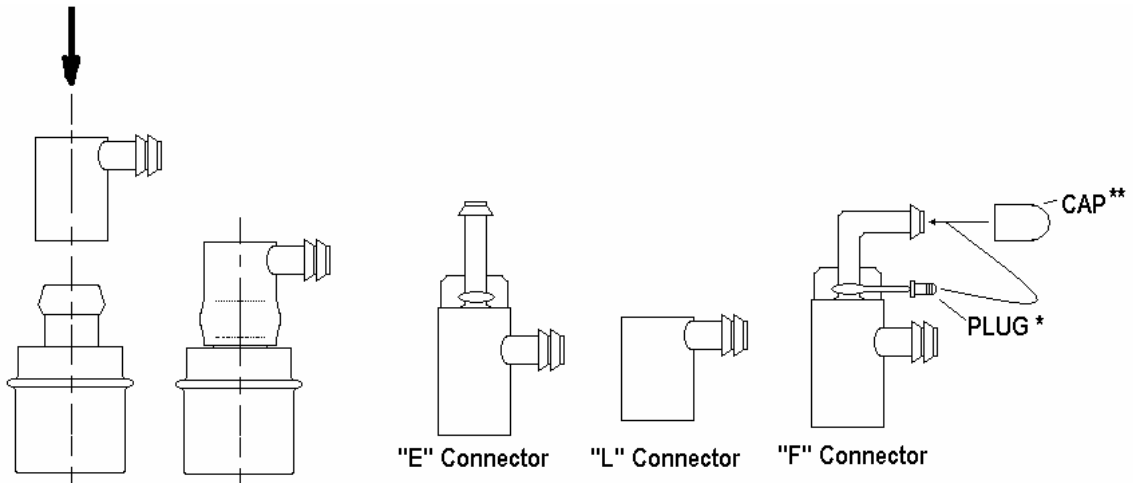

Models Covered:

9722	9729	9826
9724	9731	9827
9726	9732	9840
9727	9742	9881
9728	9819	